

Multi-Sight® and SLOT Sight® Instructions

Your Multi-Sight® System modules and Slot Sight® come with two sized fasteners.

Multi-Sight® Modules use 6-32 Torx 15 flat head screws (A)


Slot Sights changeable front sights are secured with 2-56 Torx 6 flat head screws (B)

Follow the following instructions-

Fasteners (A) are tightened snugly to seat screw but not over tightened and reinforced with Loctite 242 (Blue) thread fastener.

Fasteners (B) are snugged down to seat screw but do not over tighten or these small screws will strip and break off. Use Loctite 222 (Purple) thread fastener to reinforce these screws.


**As with any scope rings or accessories, it is recommended that all fasteners be checked periodically to ensure they are properly secured.*

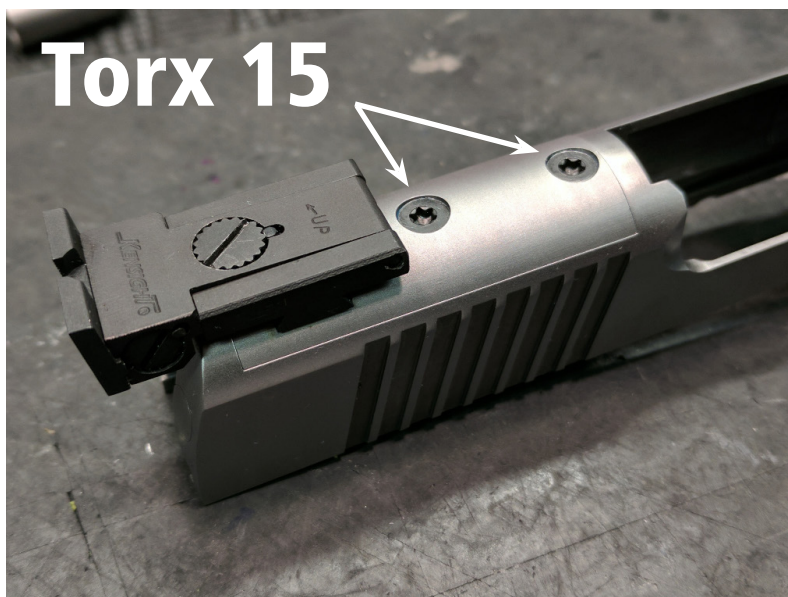

Dont be a TORK DORK!

**CAUTION-Over tightening
will result in stripped or
broken fasteners**

Dont be a TORK DORK!

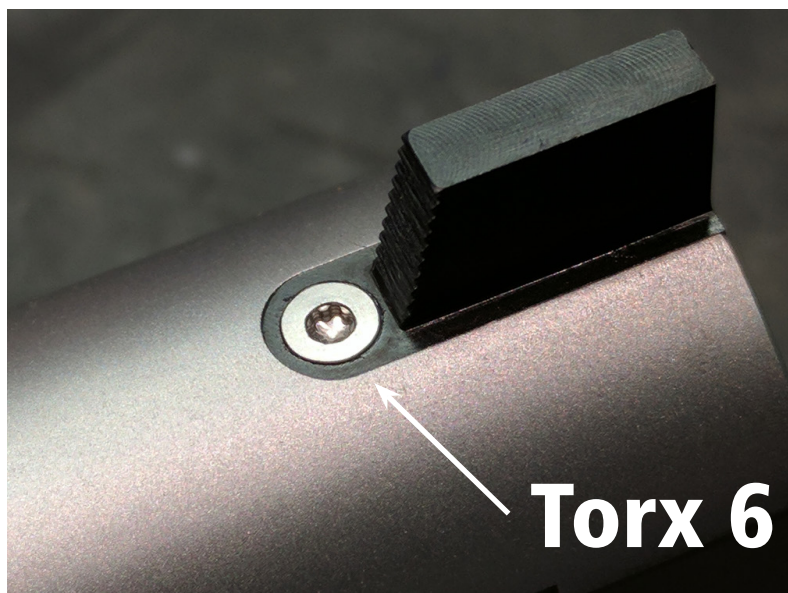

SLOT[®]
sight

